

DELGARD™

PREMIER ALUMINUM FENCING

THE STRENGTH OF BEAUTY






AERO GRADE GARDEN ARBOR INSTALLATION MANUAL

GIVE THIS MANUAL TO THE HOMEOWNER UPON COMPLETION

DT3557-60

#8 X 1" SCREW

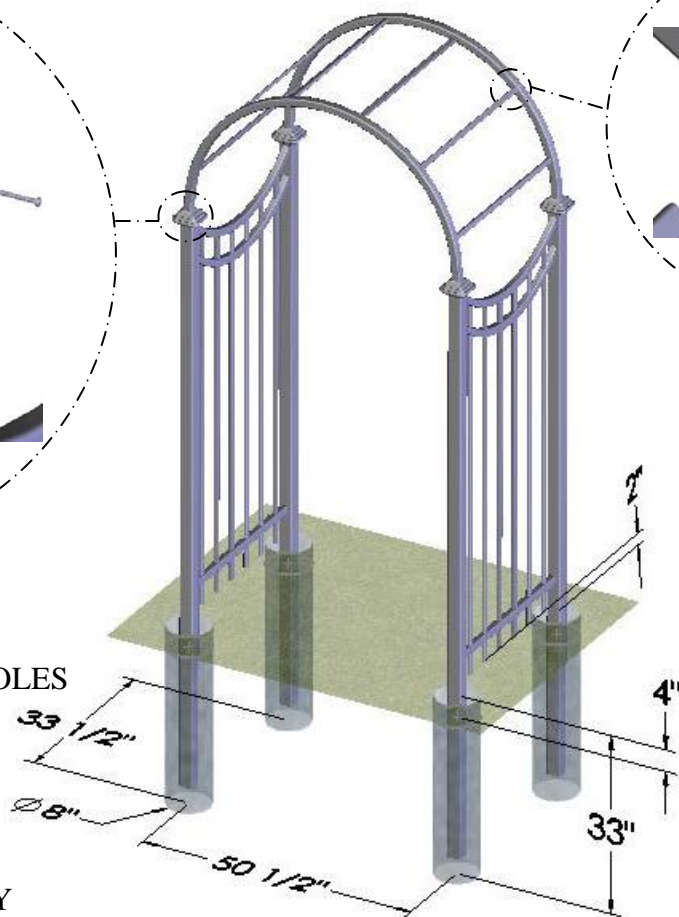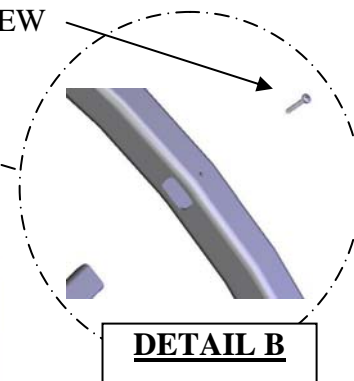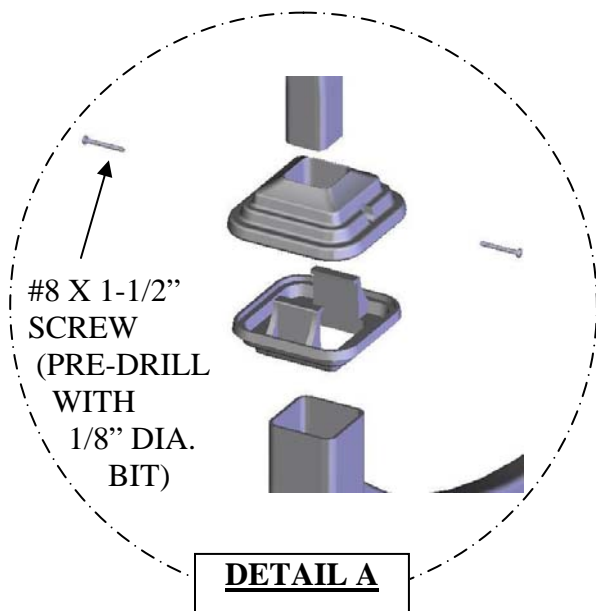

WARNING:
ALLOW CONCRETE TO CURE FOR AT LEAST 48 HOURS BEFORE HANGING GATE OR OTHER OBJECT OF SIGNIFICANT WEIGHT.

INSTRUCTIONS:

1. DIG FOUR 33" DEEP, 8" DIA. HOLES IN PATTERN SHOWN (DIMENSIONS ARE TO CENTERS).
2. UNPACK SIDES AND SET IN HOLES.
3. ASSEMBLE TOP ASSEMBLY BY SCREWING SLATS TO ARBOR TUBES AS SHOWN IN DETAIL B.
4. ATTACH TOP ASSEMBLY TO SIDES WITH TRANSITION CASTINGS AS SHOWN IN DETAIL A (DRILL HOLES WITH 1/8" BIT BEFORE INSTALLING SCREWS).
5. FILL HOLES WITH CONCRETE AND RAISE ARBOR SO BOTTOM OF SIDES ARE 2" OF GROUND AS SHOWN. USE LEVEL TO SQUARE ASSEMBLY. TAMP DOWN CONCRETE TO FIRM ASSEMBLY.